



MARQUE: PHILIPS

REFERENCE: QG3320/15 MULTISYLES

CODIC: 3738396



Always here to help you

Register your product and get support at
www.philips.com/welcome


QG3320

Question?
Contact
Philips



User manual

PHILIPS

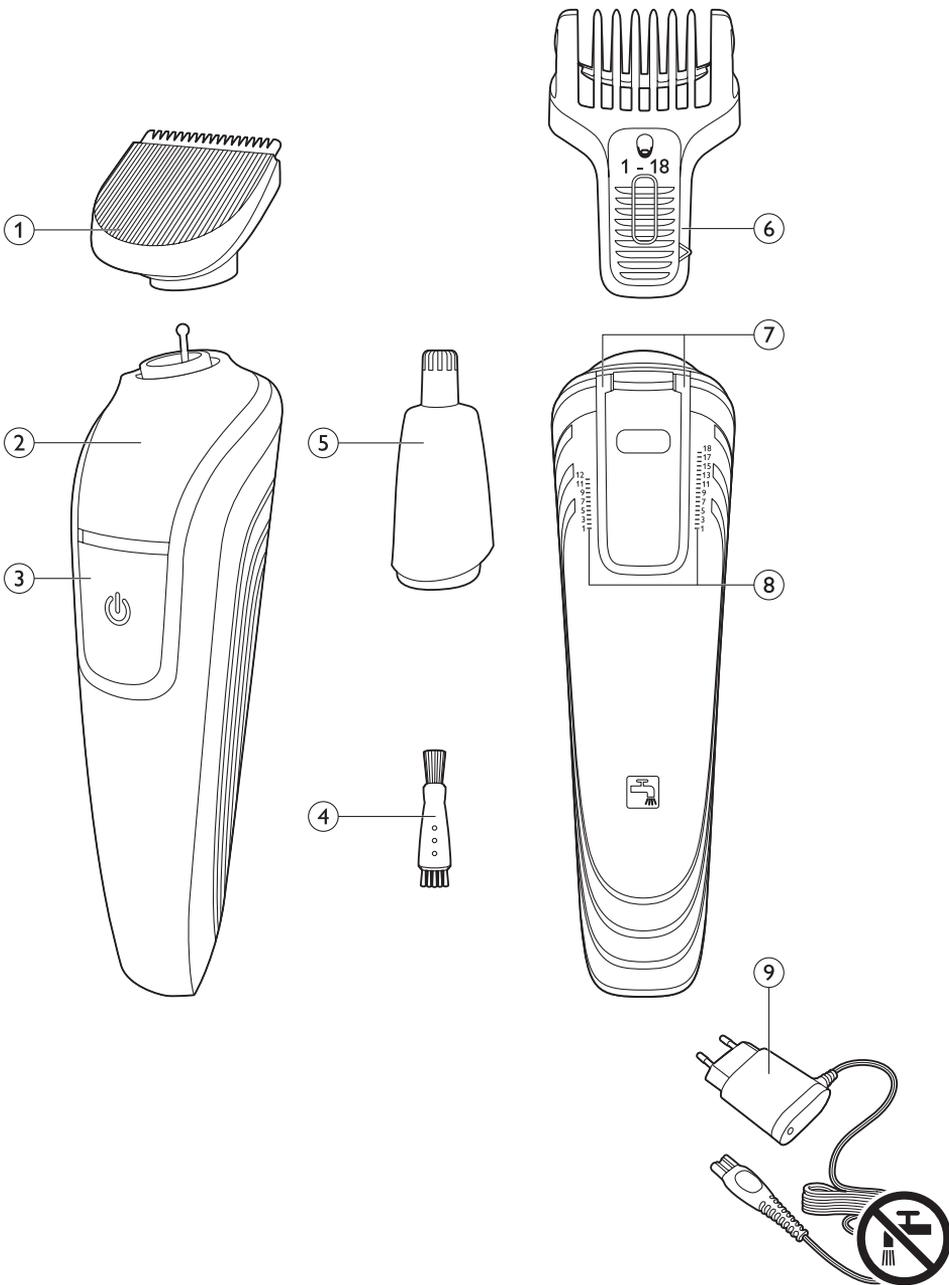

Introduction

Congratulations on your purchase and welcome to Philips!
To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

General description (Fig. 1)

- 1 Beard trimmer
- 2 Handle
- 3 On/off slide
- 4 Cleaning brush
- 5 Nose/ear trimmer
- 6 Beard comb
- 7 Guiding grooves
- 8 Setting indicator
- 9 Adapter

Important

Read this user manual carefully before you use the appliance and save it for future reference.

Danger


- Keep the adapter dry.

Warning

- Check if the voltage indicated on the adapter corresponds to the local mains voltage before you connect the appliance.
- The adapter contains a transformer. Do not cut off the adapter to replace it with another plug, as this causes a hazardous situation.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Keep the appliance and its cord out of reach of children.
- Always check the appliance before you use it. Do not use the appliance if it is damaged, as this may cause injury.
- Do not use the appliance in the bath or in the shower.

Caution

- Only use the adapter supplied.
- Use, charge and store the appliance at a temperature between 5°C and 35°C.
- Make sure the appliance is switched off and disconnected from the mains before you clean it under the tap.
- If the adapter is damaged, always have it replaced with one of the original type in order to avoid a hazard.
- If the appliance is subjected to a major change in temperature, pressure or humidity, let the appliance acclimatise for 30 minutes before you use it.
- Do not use the appliance if any of its parts is damaged or broken, as this may cause injury.
- Never use compressed air, scouring pads, abrasive cleaning agents or aggressive liquids such as petrol or acetone to clean the appliance.
- Noise level: Lc = 75dB(A)

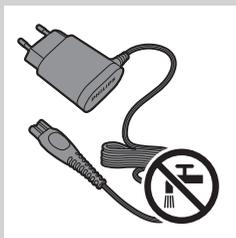

Compliance with standards

- This Philips appliance complies with all applicable standards and regulations regarding exposure to electromagnetic fields (EMF).


Charging

Standard charging takes approximately 10 hours. When the appliance is fully charged, it has an operating time of up to 35 minutes.

Note: You can get 45 minutes of cordless operating time when you charge the appliance overnight for 16 hours.

- 1 Switch off the appliance before you charge it.
- 2 Insert the appliance plug into the appliance.
- 3 Put the adapter in the wall socket.
 - ▶ The charging light on the adapter goes on to indicate that the appliance is charging.

Note: The charging light does not change colour and does not go out when the appliance is fully charged.

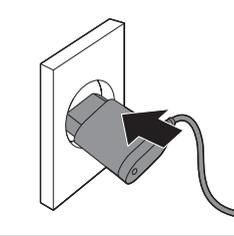



Using the appliance


Beard trimming

When you trim your beard for the first time, be careful. Do not move the trimmer too fast. Make smooth and gentle movements.

Beard trimming with beard comb


- 1 Place the beardtrimmer on the handle (1). Turn the trimmer clockwise to fix it (2).
- 2 Slide the beard comb into the guiding grooves on both sides of the handle.

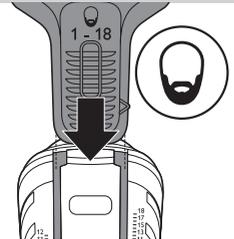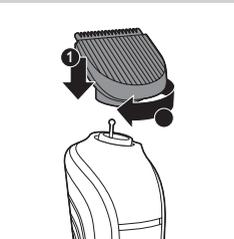

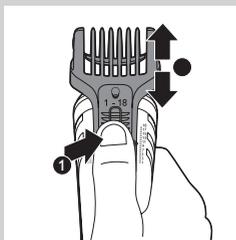

- 3** Press the setting selector (1) and slide the comb to the desired hair length setting (2).

You can choose any setting between 1 and 18mm.

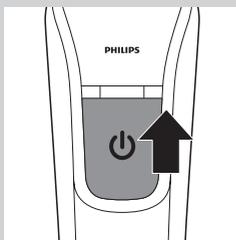


- 4** Switch on the appliance.

- 5** Slowly move the trimmer against the hair growth direction. Press lightly and always make sure the surface of the comb is in full contact with the skin.

Note: When you trim for the first time, start at the highest setting (18mm) to familiarise yourself with the appliance.

Trimming nose and ear hair

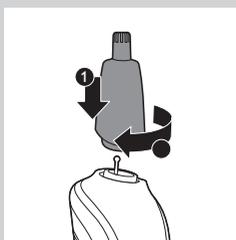

Trimming nose hair

- 1** Place the nose/ear trimmer on the handle (1). Turn the nose/ear trimmer clockwise to fix it (2).
- 2** Make sure your nostrils are clean.




- 3** Switch on the appliance and insert the tip of the trimmer into one of your nostrils.

Do not insert the tip more than 0.5cm into your nostril.


- 4** Slowly move the tip in and out while turning it round at the same time to remove unwanted hair.

To reduce the tickling effect, make sure that you press the side of the tip firmly against the skin.

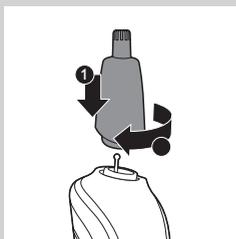

Trimming ear hair

- 1** Attach the nose/ear trimmer onto the handle.
- 2** Clean the outer ear channel. Make sure it is free from wax.

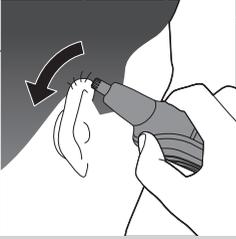

- 3** Switch on the appliance and move the tip softly round the ear to remove hairs that stick out beyond the rim of the ear.



- 4** Carefully insert the tip into the outer ear channel.

Do not insert the tip more than 0.5cm into the ear channel as this could damage the eardrum.

Cleaning

Never use compressed air, scouring pads, abrasive cleaning agents or aggressive liquids such as petrol or acetone to clean the appliance.

Always keep the adapter dry.

Clean the appliance after each use. The appliance is waterproof and therefore you can easily clean the handle and attachments under the tap.

- 1** Make sure the appliance is switched off and disconnected from the mains.
- 2** Remove any attachments from the appliance.
- 3** Blow and/or shake out any hair that has accumulated in the attachments or use the cleaning brush.
- 4** Clean the attachments under a lukewarm tap and/or with the cleaning brush.
- 5** Clean the handle under a lukewarm tap and/or with the cleaning brush.

Ordering accessories

To purchase accessories for this appliance, please visit our online shop at **www.shop.philips.com/service**. If the online shop is not available in your country, go to your Philips dealer or a Philips service centre. If you have any difficulties obtaining accessories for your appliance, please contact the Philips Consumer Care Centre in your country. You find its contact details in the worldwide guarantee leaflet.

If the adapter is damaged, always have it replaced with one of the original type in order to avoid a hazard.

Only replace damaged or worn attachments with original Philips replacement attachments.

Environment



- Do not throw away the appliance with the normal household waste at the end of its life, but hand it in at an official collection point for recycling. By doing this, you help to preserve the environment.




- The built-in rechargeable battery contains substances that may pollute the environment. Always remove the battery before you discard and hand in the appliance at an official collection point. Dispose of the battery at an official collection point for batteries. If you have trouble removing the battery, you can also take the appliance to a Philips service centre. The staff of this centre will remove the battery for you and will dispose of it in an environmentally safe way.


Removing the rechargeable battery


Only remove the rechargeable battery when you discard the appliance. Make sure the battery is completely empty when you remove it.

Be careful, the battery strips and housing parts are very sharp.

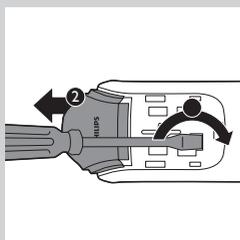

- 1 Make sure the appliance is disconnected from the mains.
- 2 Remove any attachment.
- 3 Remove the on/off slide with a flathead screwdriver.
- 4 Remove the front panel of the appliance with a flathead screwdriver.
- 5 To release the inner part of the handle, insert a flathead screwdriver in the hole (1). Tilt the screwdriver upwards to push the inner part out of the handle (2).
- 6 Pull the inner part out of the handle.
- 7 Remove the white round disc.

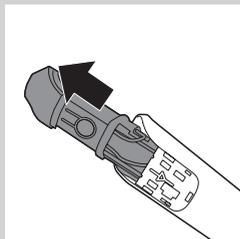

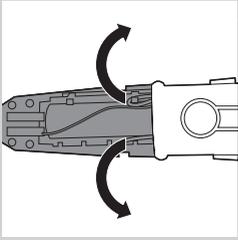

- 8** Unhook and remove the battery cover to expose the rechargeable battery.
- 9** Cut the wires to separate the rechargeable battery from the inner part.

Guarantee and support

If you need information or support, please visit www.philips.com/support or read the separate worldwide guarantee leaflet.

Guarantee restrictions

Cutting units are not covered by the terms of the international guarantee because they are subject to wear.

Troubleshooting

This chapter summarises the most common problems you could encounter with the appliance. If you are unable to solve the problem with the information below, visit www.philips.com/support for a list of frequently asked questions or contact the Consumer Care Centre in your country.

Problem	Possible cause	Solution
The beard comb does not stay attached to the handle.	You do not attach the beard comb correctly.	Slide the beard comb into the guiding grooves on both sides of the handle until you hear a click.
	The guiding grooves are dirty.	Clean the appliance and the guiding grooves thoroughly.
	The comb is broken.	Go to your Philips dealer or contact a Philips service centre to purchase a new comb.
The appliance does not work anymore.	The rechargeable battery is empty.	Charge the appliance (see chapter 'Charging'). Make sure you switch off the appliance before you charge it. During charging, the charging light on the adapter lights up continuously. If the charging light does not light up, check whether there is a power failure or if the wall socket is live. If there is no power failure and the wall socket is live but the charging light still does not light up, take the appliance to your dealer or a Philips service centre.
The appliance does not work when it is connected to the mains.	The appliance is not designed to work from the mains.	Switch off the appliance and charge it for 10 hours (see chapter 'Charging').

Problem	Possible cause	Solution
The appliance does not charge when it is connected to the mains.	The appliance has to be switched off when you charge it.	Switch off the appliance.
The appliance does not trim as well as it used to.	The cutting element of the attachment you are using is dirty.	Remove the attachment from the appliance. Clean the attachment under a lukewarm tap.
The appliance becomes hot.	The cutting element of the attachment you are using is dirty.	Remove the attachment from the appliance. Clean the attachment under a lukewarm tap.